



- ON/OFF P 100
- LW, MW, SW, FM P101-P108
- , RADIO, TAPE P201-P204
- HIGH, NORMAL, MIC OFF P301-P304
- MODE: STEREO, STEREO, MONO P601-P604
- BEAD: OSC I, OSC II, OSC III P601-P604
- PLAY / REC P701-P712

www.serwis-tv.com

Radiomagnetofon Edyta 2
RMS 823