





| | 1 | 2 | 3 | 4 |
|-------------------|----------|--|---|---|
| Siec: | 220 | [Diagram showing a 220V AC source connected to terminals 1, 2, 3, and 4] | | |
| Wyg. plamki | [Symbol] | [Diagram showing a pilot lamp connected to terminals 1, 2, 3, and 4] | | |
| Film | [Symbol] | [Diagram showing a film switch connected to terminals 1, 2, 3, and 4] | | |
| Tony wysokie | φ | [Diagram showing a high tone switch connected to terminals 1, 2, 3, and 4] | | |
| Tony niskie | ∩ | [Diagram showing a low tone switch connected to terminals 1, 2, 3, and 4] | | |
| Słuchawki | [Symbol] | [Diagram showing a speaker switch connected to terminals 1, 2, 3, and 4] | | |
| W i V pasma | UHF | [Diagram showing a UHF/VHF switch connected to terminals 1, 2, 3, and 4] | | |
| I, II i III pasmo | VHF | [Diagram showing a VHF switch connected to terminals 1, 2, 3, and 4] | | |

Rys. D-12. Schemat zunifikowanego